TECHNICAL BROCHURE

STONE WALL



FUNCTIONAL LONG LASTING AESTHETIC



STONE WALL

INDOOR & OUTDOOR

Product Range

2700 x 600 x 6mm
SAWING WOOD


Birch


White

1200 x 600 x 5mm
STARMOON


White


Grey

1200 x 600 x 4mm
RAMMED EARTH


Danxia Red



Beige

2700 x 600 x 5mm
WEAVING STONE


Beige


Red

2700 x 600 x 6mm
ROUND LINE


Grey


White

2700 x 600 x 5mm
LINE STONE


Grey


White

2700 x 600 x 4mm
FINE LINE


Grey


White

1200 x 600 x 3.5mm
TRAVERTINE


Golden white


White


Roman White

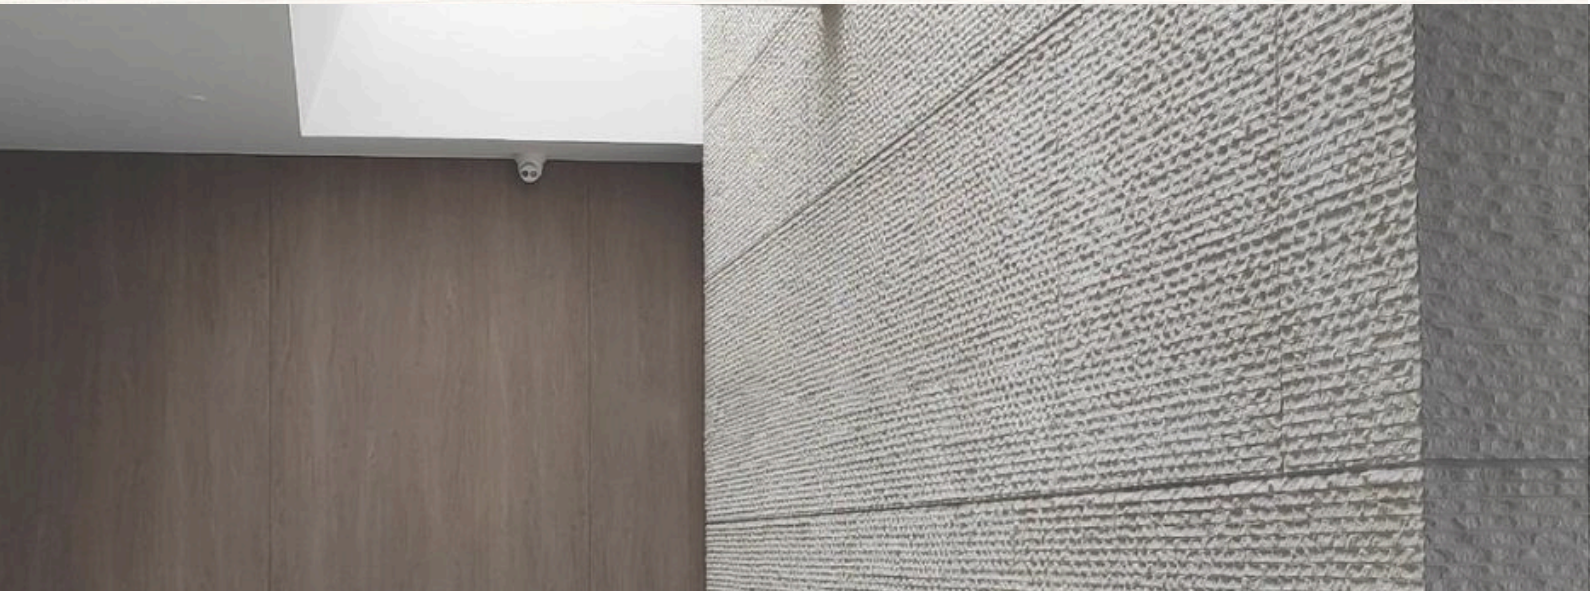

Linear Red


ClayBank


Beige


Light Grey


Grey



STONE WALL

INDOOR & OUTDOOR

Installation Guide

These timber panels are pre-finished and designed for easy installation, allowing you to quickly transform any room. The versatility of GRACE panels means they can be tailored to the aesthetic of your space, providing a perfect canvas for any colour scheme.

Tools

100 L Stirring Barrel



Stirring machine (Stir adhesive and grout)



Infrared level
(Radiate horizontal line)



Tape measure (Measure product size)



Ink line box
(Mark the positioning line)



Glue gun (Apply glue)



Handheld angle grinder
(Grinding edges)



Masking tape
(Assist in grouting)



Grouting bag
(Hold grout)



Nails (Reinforce products on the wall)



Small scraper
(Process edges)



Trowel
(Apply adhesive)



Clapper
(Pat the product)



Utility knife
(Cut a seam)



Sponge (Clean the product surface)

STONE WALL

INDOOR & OUTDOOR

Installation Guide



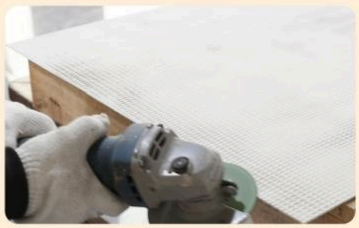
① The base must be clean, flat and free of hollows



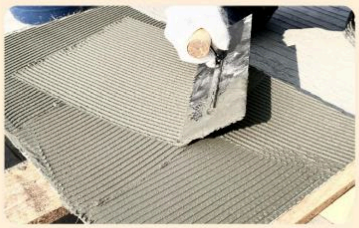
② Use infrared level and ink line box to position according to the design drawings



③ Measure the size based on the positioning



④ Trim the rough edges of the product using angle grinder



⑤ Apply the adhesive on the back of the product and make sure at least 90% of the back are covered with adhesive



⑥ Stick on the wall



⑦ Use a clapper to adjust the seam width and compact the product



⑧ Fill the gap with grout



⑨ Pull a seam with a grout bar



⑩ Draw the seam with adhesive at the 45° external corner



⑪ When the adhesive is half-dry, use a small scraper to remove the overflow



⑫ Finally clean the surface with a dry sponge

DEVOX